



User Manual

Automatic Pet Feeder

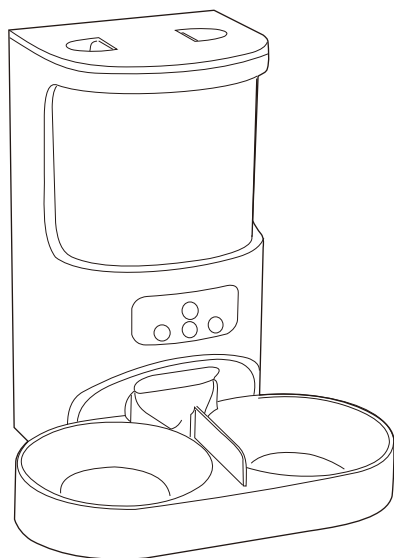

Parts disassembly and cleaning

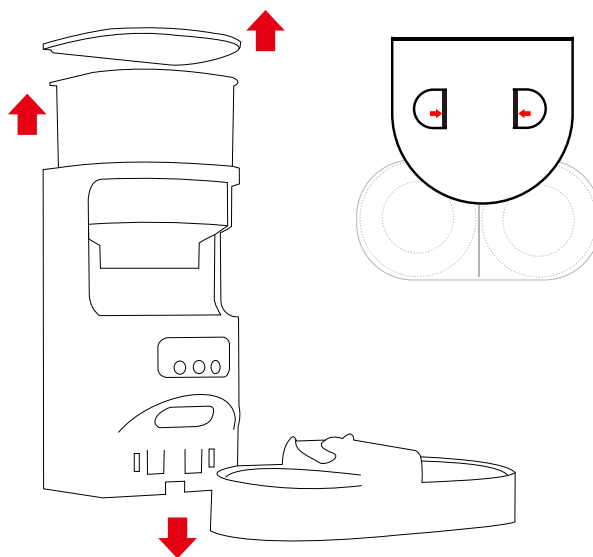


1. Press the face cover buckle to take out the face cover upwards;
2. Gently lift up and take out the grain barrel;
3. Press the buckle and take out the grain bowl downward;
4. The main machine part cannot be directly washed with water, but can be cleaned with a clean cloth.

SAFETY INSTRUCTIONS

- Read all instructions before using the Automatic Pet Feeder.
- Carefully remove all package materials and check about transport damage for retaining for future use.
- Make sure that all electrical connections are kept clean. Ensure that they are kept dry.
- Make sure that the product is on a stable, flat, water-resistant ground.
- If it is not used, please shut down the power supply and pull out the plug.


Control panel

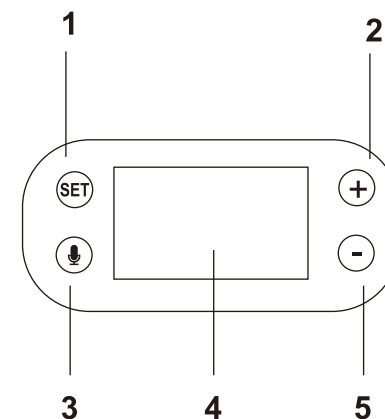

1. SET: When the screen is locked, long press to wake up the device.

In the wake state, long press to set the activation time; To set the time, short press to skip to the next digit.

2. + : In the unset state, press to select the number of meals. In the set state, adjust the current number plus.

3.  **In the wake state**, long press to hear the "DI" sound, and the device records. Release the button, hear the "Didi" sound, the end of the recording;

In the wake up state, press to play the recording.

4. **Screen**


5. - : **In the lock screen state**, press to select the number of meals; In the set state, adjust the current number.

Operation Instruction

1. Wake-up and lock screen


Wake up: press the "SET" button for 3 seconds, the screen is lit, the green light on, the device wakes up.

Lock screen: no operation for 10 seconds, the screen darkens, the device enters the lock screen state.



2. Time setting

In the wake-up state, press the "SET" button for 3 seconds to adjust the number position when the time number is blinking. At this time, short press the "SET" button to adjust the number position, short press the "+ / -" button to adjust the number.

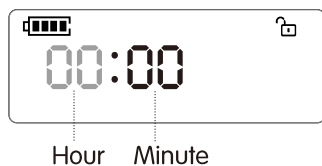

3. Feeding plan setting

In the wake-up state, short press button "+" enter to the first meal feeding settings page. At this time, long press the "SET" for 3 seconds, the time number beeps, and short press the "SET" to adjust digital position, short press the "+ / -" button to adjust the number. Set up and press the button "+" to switch the number of meals (up to 5 meals).




First meal
Feeding time Portions of food

4. Recording setting


In the wake-up state, long press the button "🎤", hear the "Di" sound, and start recording, the red indicator light is on, release the button till the end, hear the "Didi" sound. At the end of the recording, press the "🎤" button to play the recording.

The device only supports one recording message for up to 10 seconds. Recording are performed automatically during regular feeding.

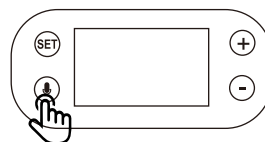


5. Manual Feeding

In the wake-up state, press "SET" and "+" at the same time, the device feeds one portion manually.

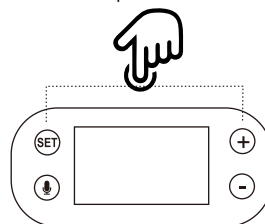

6. Device reset

In the lock screen state, long press "+" for 5 seconds, the device reset after hearing "Dididi".

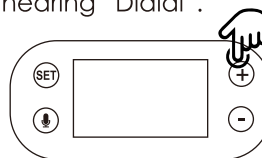

kindly reminder

1. This equipment is only suitable for dry grain. It is recommended that grain diameter 2-14 mm ;
2. Regular observation of grain barrels, when the amount of grain is insufficient, please add grain in time ;
3. It is recommended that according to the amount of pet food reasonable arrangement of grain, scientific feeding ;
4. Grain barrels are detachable, it is recommended that regular disassembly clean, dry after use.